

INSTRUCTIONS FOR INSTALLING ROLLER-BLINDS IN CASSETTES

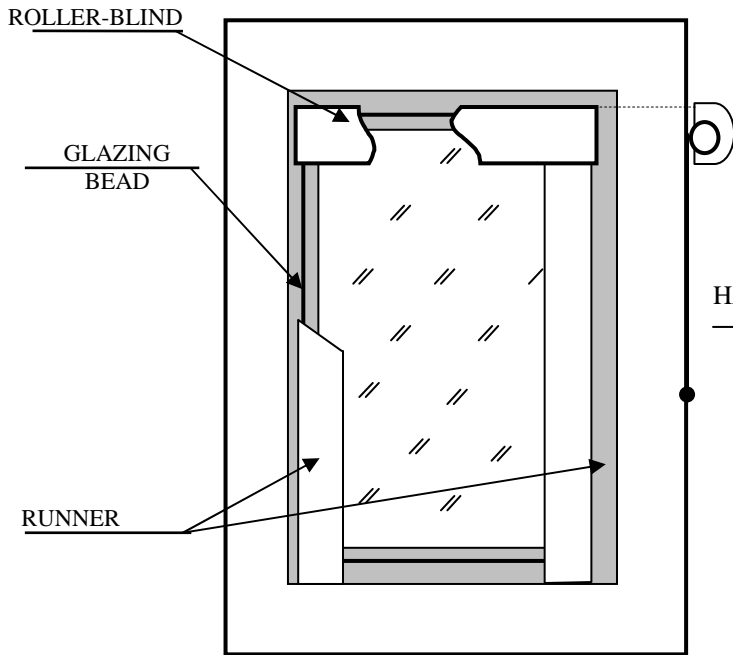


Fig 1

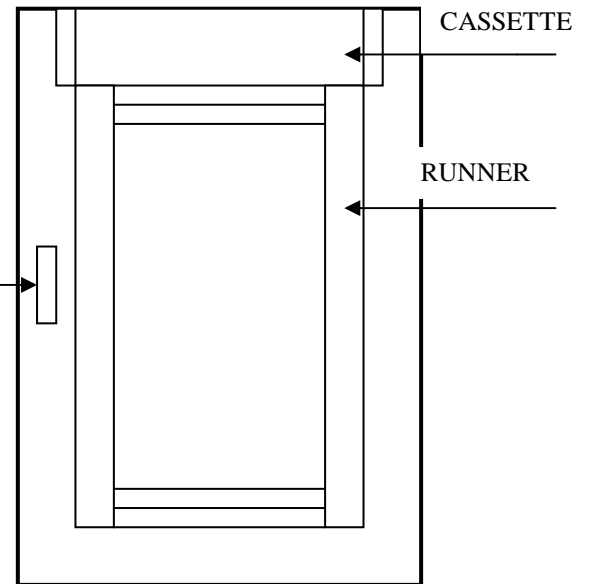


Fig 2

1. Before installing the roller-blind, it is necessary to thoroughly clean all places where the cassette and runners are to be fixed; organic solvent serves this purpose best.

For „Retro with flat runners" and „Sigma - P" (Fig. 1):

- Start with mounting the cassette, paying special attention to its horizontal positioning, which is supposed to be done with the fabric rolled up.
- Fix the „**Retro**" cassette onto the window with adhesive tape or screws. However, „**Sigma - P**" cassette must be screwed onto the glazing bead, having previously removed plastic covers, which cover appropriate holes. The top edge of the cassette must be fixed at least 1 cm above the inner edge of the glazing bead; and in the event there is none, it must be fixed above the inner edge of the window frame.
- Next the runners must be fastened along the inner edges of the glazing beads.

For „Retro with spacing runners" (Fig. 1):

- First, fasten the runners along the glazing beads, starting from the bottom inner edge of the window frame.
- The cassette must be screwed onto the runners.

For „Sigma - C" (assembly outside the window pane limitation outline) (Fig. 2):

- Start fastening the runner on the frame with the handle so the bottom part of the runner is on the same level as the inner edge of the window frame.
- Next adjust the width between the runners to the width of the cassette, which should be aligned with the already fastened runner. Mark the correct distance and fasten the other runner.
- Fasten the cassette horizontally (parallel with the top edge of the window frame) so the bottom edge of the cassette overlaps the already fastened runners.

2. If it is necessary to uninstall the already fastened cassette and runners, it is advised to cut the adhesive tape with a wall-paper cutter. This is necessary to avoid tearing off part of the roller-blind along with the glazing bead.