


# GUIDELINES FOR INSTALLING PLEATED BLINDS

1. Screw on the bracket (Picture 1)




Picture1

2. Depending on the variant, install the square-shaped bracket (Picture 2) or the fixture (Picture 3) on the top and bottom part of the window frame - ca. 1.5 cm from the edge

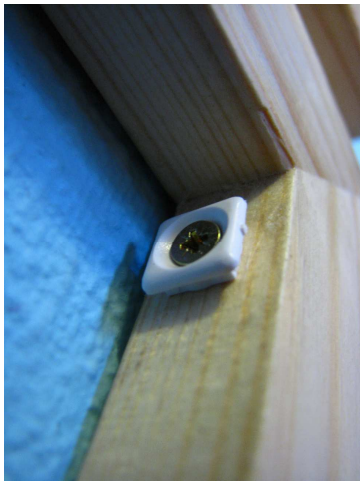


Picture 2

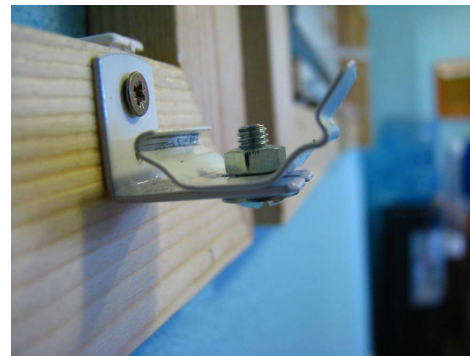


Picture 3

3. Place the plastic ends of the string onto the installed brackets (Picture 4) or snap the top / bottom rail of the pleat onto the installed fixtures (Picture 5).

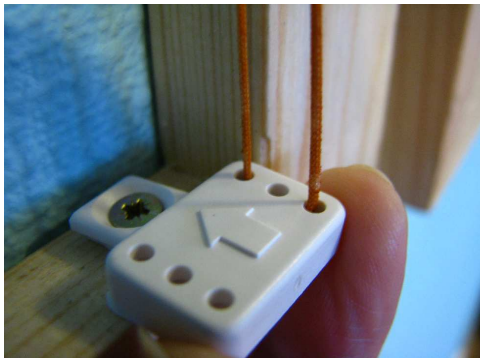

Picture 4

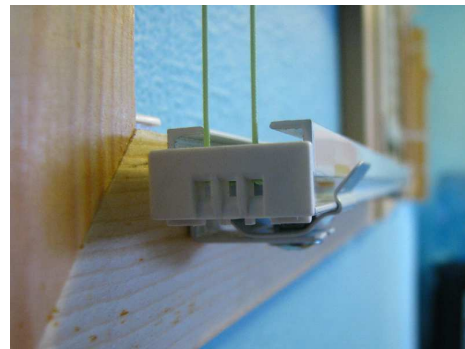

Picture 5

4. Any corrections of the string tension can be made with the spring which is located in the top rail.