


DIAGRAM OF WINDOW MEASUREMENT TAKING FOR ROLLER-BLINDS IN CASSETTES

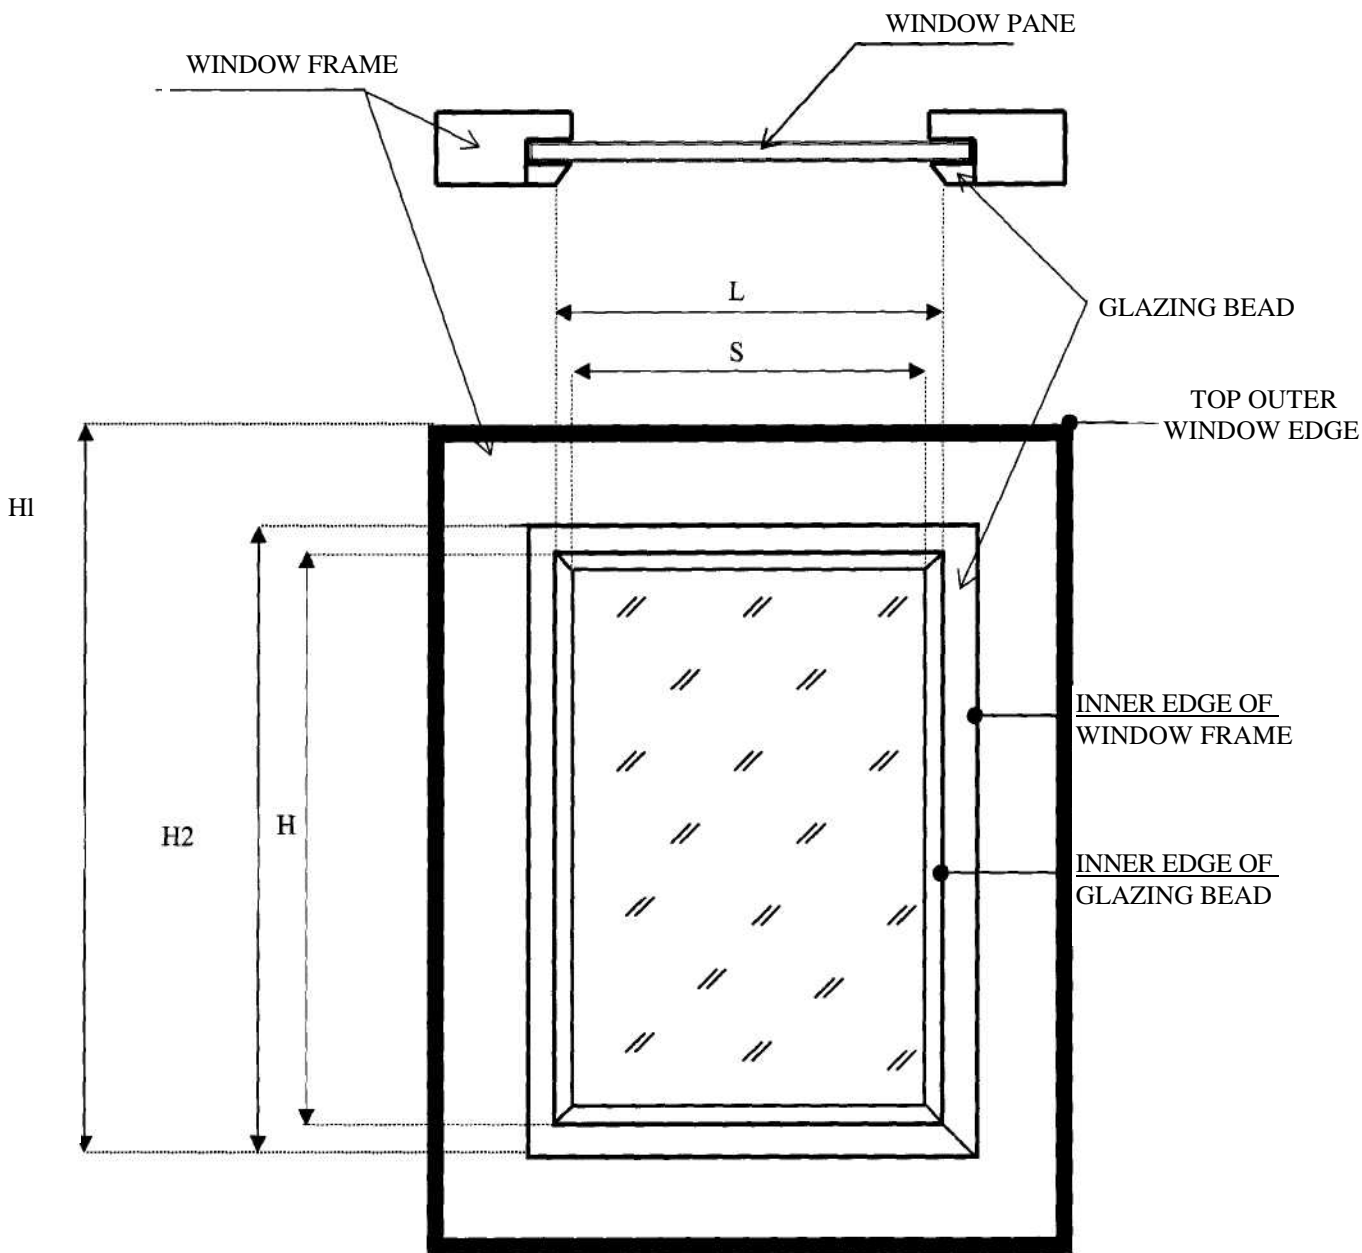

- L** – the width between the inner edges of the glazing beads (if there are none, it is the distance between the inner edges of the window frame).
 - S** - the width of the window pane incl. sealing, if there is any.
 - H** – the height for „Retro with flat runners" and „Sigma - P" – the distance between the inner edges of the glazing beads.
 - H1** - the height for „Sigma - C" - the distance between the bottom inner edges of the window frame and the top outer edge of the window frame.
 - H2** - the height for „Retro with spacing runners" – the distance between the inner edges of the window frame.
- Caution! In the case of „Sigma - C", the distance between the handle and the inner edge of the window frame must be at least 1.9 cm.

**PLEASE FOLLOW THIS WAY OF MEASUREMENT TAKING
AND PRECISELY MEASURE THE WINDOWS.**