


DIAGRAM OF ROOF WINDOW MEASUREMENT TAKING FOR ROLLER-BLINDS IN CASSETTES - RETRO

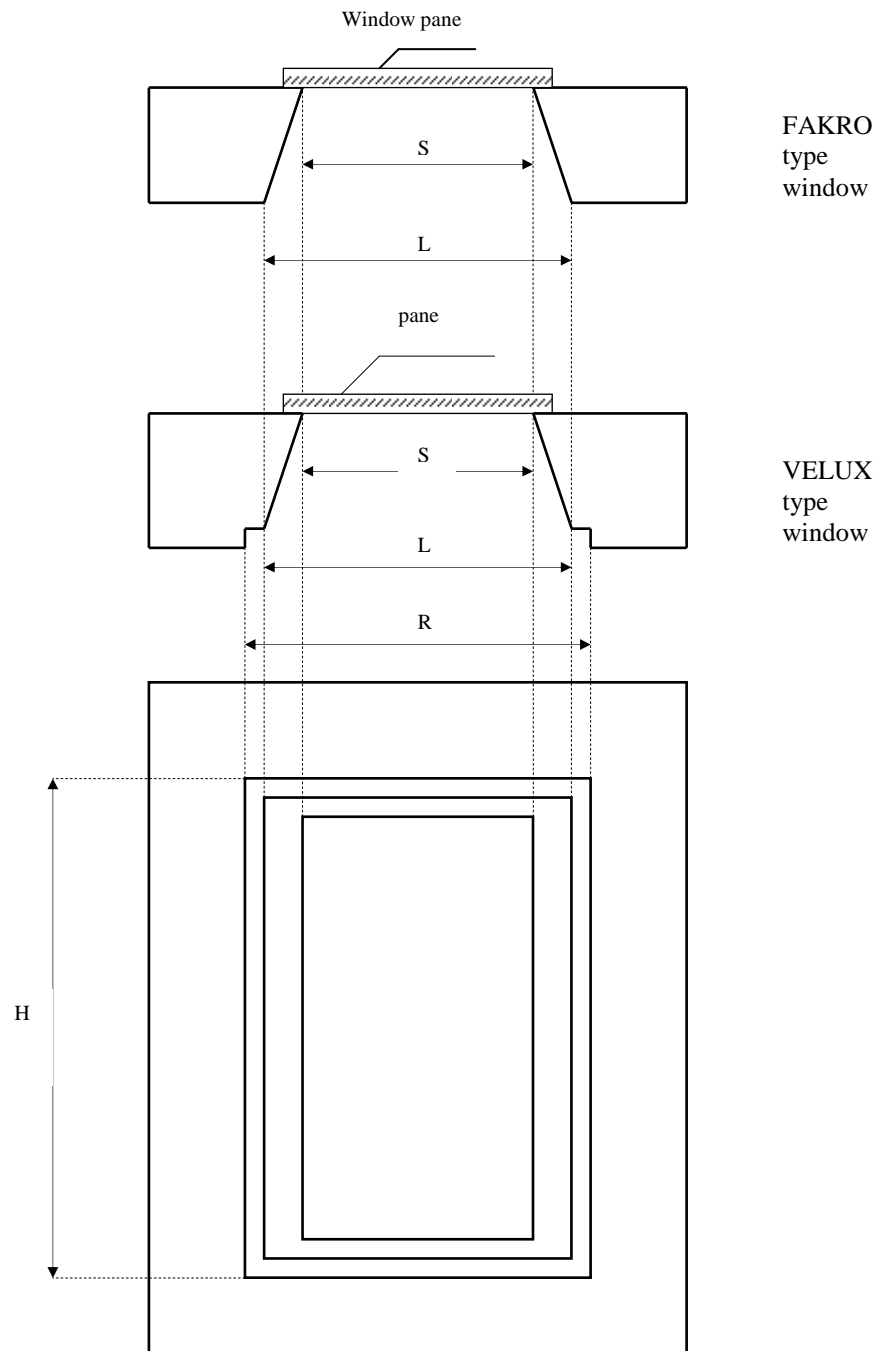

- R – total width of the roller-blind (specify in the REMARKS column **only** in the case of VELUX type windows with a groove).
- L – width between the inner edges of the window frame (casement).
- S – width of the window pane with sealing, if there is any.
- H – height of the roller-blind.